DS04-PATXPTX-02
Dissolution Drawing

NO.	Component Name	Amount	Component NO.
1	HexagonScrew	8	PC000106SW
2	HexagonScrew	8	PC000018SW
3	HexagonScrew	8	PC000004SW
&4	DownBallSeat(PP)	2	PB000249
-	DownBallSeat(PTFE)	2	PB000153
#5	Teflon Oring	4	PB000086
&6	UpperBallSeat(PP)	2	PB000248
-	UpperBallSeat(PTFE)	2	PB000152
7	SteelWasher	32	PC000067
&8	BallCover	4	PB000129
&9	Ball	4	PB000039
#10	Oring	2	PB000013
11	HousingOfPump	2	PB000200
13	SteelWasher	2	PC000057
&14	PadOfDiaphragm(Include Screw)	2	PB000261
&15	OutsideDiaphragm	2	PB000025
&16	Diaphragm	2	PD000044
-	InsideDiaphragm(collocate with 16)	2	PD000039
17	PadOfDiaphragm	2	PA000059
#18	Oring	2	PD000011
19-28	ShaftCover-A Set	1	A16-19-28
20-28	ShaftCover-B Set	1	A16-20-28
21-29	AxisSwitch Set	1	A16-21-29
&22	ShaftOfDiaphragm	1	PA000114
32	HexagonScrew	4	PC000005SW
#33	AbnormalOring(Outside)	1	PD000140
#34	AbnormalOring(Inside)	1	PD000139
&35	BodyOfSequential	1	PA000102
&36	PistonOfAirValve	1	PA000141
#37	Oring	1	PDAP0023
#38	Oring	2	PDR00016
&39	StartingCopperLatch	1	PA000112
40	CoverOfSequential-A	1	PD000080
41	CoverOfSequential-B	1	PB000021
#42	Oring	1	PD000035
43	HousingOfSequential	2	PA000117
44	BodyOfCylinderBase	1	PA000143
45	HexagonScrew	4	PC000004SW
46	Pipe	2	PB000132T
47	HexagonScrew	8	PC000104SW
48	BufferPad	2	PD000056
49	Steel Nut	8	PC000109
50	Silencer	1	PB000045
51	AirPressureRoomOfPump	2	PA0002150
&53	SlitheryMassValve	1	PB000334
&54	IncludePly	1	PB000072

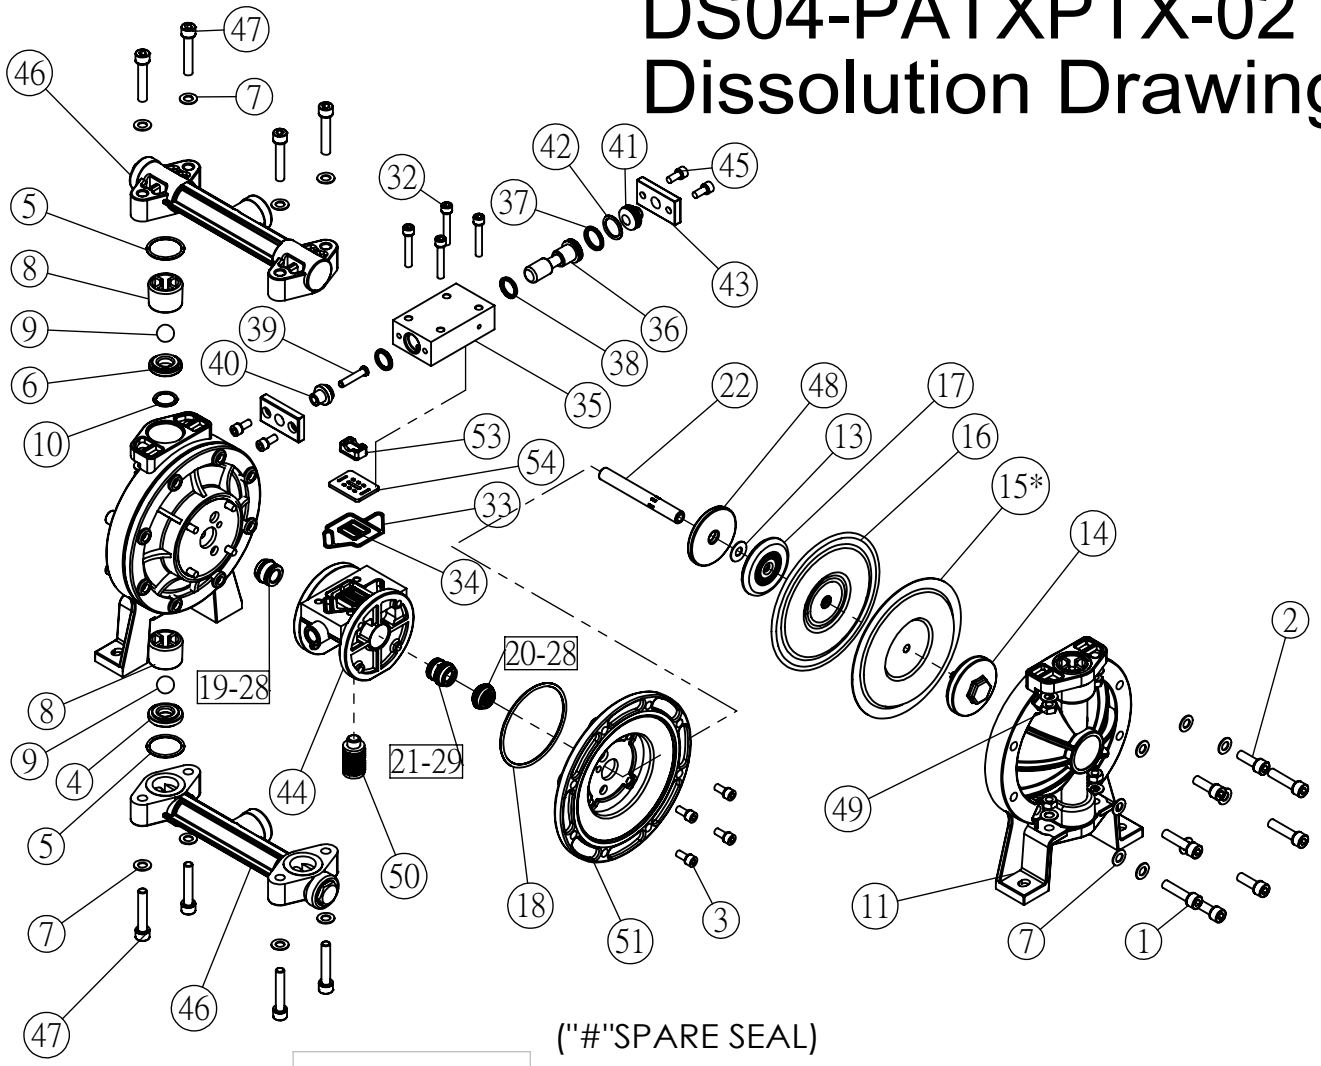

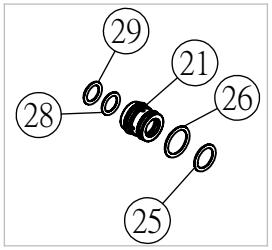

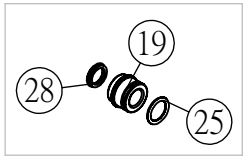

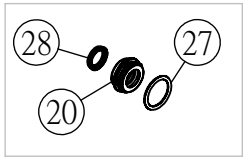

("#"SPARE SEAL)

("&"Consumptive PartS Possible)

NO.	Component Name	Amount	Component NO.
19	ShaftCover-A	1	PB000170
20	ShaftCover-B	1	PB000173
21	AxisSwitch	1	PA000150
#25	Oring	2	PD000023
#26	Oring	1	PD000050
#27	Oring	1	PD000054
#28	U-type Oring	3	PDAP0012
#29	Oring	1	PD000003

(*)In some model doesn't have this labelling component

2017/12